



MUSIC / VIDEO PLAYER

QUICK START GUIDE

BAND EXCLUSIVE

Powering On the Player

To turn on the player, slide the power switch (on the lower left side) to the **ON** position (down). If the power switch is already on, then simply hold the **BACK** key to power the player on again.

NOTE* This player will automatically power down if it is left inactive for too long. The "Off Time" and "Sleep Time" settings can be changed in the SETTINGS function under PLAYER CONFIGURE.

Player Navigation

Use the << and >> keys to highlight the different function options.
Use the **ENTER** (center button) key to select a function.
Use the << and >> keys to select different menu options or files.
Use the **ENTER** key to play or pause the video or music files.
Hold down the **BACK** key to bring you back to the main menu.

Shutting Down the Player

1.) From the Main Menu, hold down the **BACK** key to shut down.
2.) Then slide the power switch to the **OFF** position (up).
NOTE* Step 1 is not required, but does ensure that all SETTING changes are saved.

Please Rate The Player

Please do not be any more gentle with these players than you would your own, we would like to know how well our product holds up in the wild and we can only do this with your help.

Please go to CMOMUSIC.COM and under the Products Menu select Rate Our Products in Order to create an account and rate our player

Please return Player after 2 Weeks and provide your Feedback



CMO MUSIC
The Artists Digital Source

6202 Clark Center Ave
Sarasota FL 34238