
User's Manual



Thank you for purchasing this product.

Please read the manual carefully before use.

We recommend you keep it for future reference.

Electronic Versions of this document are available at

www.bandexclusive.com/support

Table of contents

1. Quick Start	3
2. General Overview	4-6
Product Features.....	4
Product Specifications.....	4
Accessories.....	5
Caution.....	5
Charging the player.....	5
Downloading from the PC / Disconnecting PC.....	6
3. Basic Operation	6-14
Button Use	6
Music	7-8
Playback mode.....	8
Return to main menu.....	8
Music setting	8
Lyric Display.....	9
Video	9-10
Playback mode.....	9
Converting Video files.....	9
Photo	10
FM	11
Search Channels.....	10
Save Channel	10
Playback Channel.....	11
Delete Channel.....	11
FM Recording.....	11
E-Book	12
MIC Recording	12
Settings	13
4. Additional information	
SD card	15
Trouble Shooting	15

Quick Start



Powering On the Player

To turn on the player, slide the power switch (on the lower left side) to the **ON** position (down). NOTE* This player will automatically power down if it is left inactive for too long. The “Off Time” and “Sleep Time” settings can be changed in the **SETTINGS** function under **PLAYER CONFIGURE**.

Player Navigation

Use the **PREVIOUS** and **NEXT** keys to highlight the different function options.

Use the **ENTER** key to select a function.

Use the **PREVIOUS** and **NEXT** keys to select different menu options or files.

Use the **ENTER** key to play or pause the video or music files.

Hold down the **BACK** key to bring you back to the main menu.

Hold down the **PREVIOUS** and **NEXT** keys in settings to change time or date features.

Shutting Down the Player

-
- 1.) From the Main Menu, hold down the **BACK** key to shut down the player.
 - 2.) Once the player shuts down, slide the power switch to the **OFF** position (up).
- NOTE* Step 1 is not required, but does ensure that all SETTING changes are saved.

General Overview

Features:

- 2.4 inch TFT-LCD
- Supports MP1, MP2, MP3, WMA, WMV, ASF, WAV, AVI
- Professional equalizer effects
- Tempo Rate adjust
- Movie player
- FM, FM recording
- Photo Album + Slide show
- Text View
- Built-in microphone supports high quality recording
- USB2.0 ultra fast data transfer
- High capacity USB flash storage for mobile disk
- Supports Mini SD / TF card
- Multiple languages supported

Product Specifications

Dimension: 84.5 X 46.5 X 12mm

Weight: 59g

Flash memory: Built-in basic flash memory (1 – 8 GB depending on your model)

Power supply: Built-in 3.7V,700mAh rechargeable Li-ion battery

PC interface: USB 2.0

Earphone output: 5mW +5mW (32OHM)

Speaker output: > 200mW

Frequency response: 20Hz-20KHz

FM frequency: 87.0MHz -108.0MHz

Audio playback: MP3, WMA, WMV
Video playback: MPEG-4 (AVI)
Picture format: JPG, BMP, GIF

General Overview

Caution

1. Do not keep the player in high temperatures or in a damp place for too long and do not leave the player in direct sunlight.
2. Do not drop the player or apply pressure to the screen.
3. Do not disconnect the player from your PC while the player is transferring data, it may cause a program bug or data loss.
4. Do not disassemble or modify the product, or you will void the warranty.
5. Make sure that the player does not come in contact with chemicals such as benzene or thinner.

Charging the player

1. Connect the player to the computer or power outlet through the USB cable and wait for SCREEN 1 to appear on your player. Select the battery icon using the ENTER key and wait for SCREEN 2 to appear.



SCREEN 1



SCREEN 2

NOTE* In order to prolong battery life, the battery should be completely exhausted before the first charge. The charger should be disconnected from the player once the charging has completed in order to avoid battery capacity loss.

General Overview

Downloading from the PC/ Disconnecting PC

1. Insert the installation CD in your computer and install the manager

software. Software may also be pre-loaded on the internal memory in the TOOLS folder.

2. Install the USB driver program (Only for Windows 2000 system or lower).
3. Connect the player to the computer through the USB cable and wait for SCREEN 1 to appear on your player. Select the USB icon and wait for SCREEN 2 to appear.



SCREEN 1



SCREEN 2

4. Viewing the computer screen, select the desired files from the computer and drag them into the removable disks that represent either the player or the SD memory card. Make sure to drag the files into their corresponding folders.

MUSIC playback: MP3, WMA


VIDEO playback: MPEG-4, AVI

PHOTO format: JPG, BMP, GIF

5. Click the “Safely remove hardware” icon at the bottom right of your computer screen before disconnecting the player.
6. To finish the downloading process, physically disconnect the USB cable from the computer.

Basic Operation

Button Use

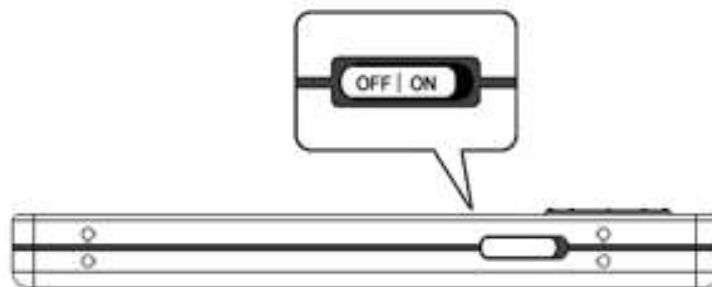

-
- If the power switch is set to the off position, the player will power off and the keys on the player will not function.
 - Set the switch to the on position for the player keys to function.
 - Use the **PREVIOUS** and **NEXT** keys to highlight the different functions or files.
 - Use the **ENTER** key to select the function and play/show, music /film/photo.
 - Press the **VOLUME** key to open the adjustable volume interface. Press **NEXT** to raise the volume and **PREVIOUS** to lower the volume. Press **BACK** to exit the volume interface.

Basic Operation

MY MUSIC

- **General**

Press the **ENTER** key to select the “My Music” function.

Press the **ENTER** key to select a “My Music” menu option.

NOTE: Music Files must have appropriate TAG information pre-loaded in them in order for some of the following to work. Pre-Loaded content has been loaded with this data.

Available “My Music” menu options:

All Music - Displays every audio file in alphabetical order

Artist - Separates the music into different artist folders

Album - Separates the music into different album folders

Genre - Displays the music according to the different genres of each audio file

My Music List - Access to the five customizable user playlists

Dir List - Arranges the audio files based on their folder structure

Record List - Access to all FM or Voice recorded files

My Music Tag List - Tags are a way to mark and save any moment in an audio file

- **Play back mode**

Use the **PREVIOUS** key to select previous music.

Use the **NEXT** key to select next music.

Hold the **PREVIOUS** key to Skip Backward.

Hold the **NEXT** key to Fast Forward.

Press the **ENTER** key to pause and then press the **ENTER** key again to resume.

- **Exit play back mode**

Press the **BACK** key once to exit the music playback mode. The music will continue to play unless you pause before leaving.

Hold the **BACK** key for 1 sec to go back to the main menu.

- **Music Settings**

While listening to an audio file, hold down the **ENTER** key to bring up the different music settings.

Music Settings:

Repeat - Sequence / Repeat One / Repeat All / Random Play / Intro

EQ - Normal / Rock / Pop / Classic / Soft / Jazz / DBB / SRS WOWHD

Replay Times - Choose from 1-10 Times

Replay Gap - Choose from 1-6 Seconds

Replay Mode - (Available only in play back mode) A→B repeat

Tempo Rate - Allows users to manually adjust the tempo rate of each song

Remove - This settings option will delete files from the player

Add to MyList – This option adds any audio file to one of the 5 existing playlists

Information - (Only available in play back mode) Displays audio file information

Add Tag - Tags are a way for the user to mark and save any moment in an audio file.

Fade In / Fade Out - If enabled, this setting will add a Fade In / Fade Out

Volume - Allows the user to adjust the volume of the audio file being played

Basic Operation

User EQ Set

Click next and previous keys and move to different items.

Use up and down keys to select the value and click yes to apply it.

Reply Times/Reply Gap

Hold down the **NEXT** key or the **PREVIOUS** key to scroll through the sub menu options.

Release the key just before you get to your desired sub menu option.

Lyric Displaying

Download LRC file from internet or copy LRC file to the player from your PC. The Lyric file must end in .LRC for the player to read it appropriately. The lyric file and music file must be stored in the same folder and their file names must also be the same.

If no Lyric file is present, then the MUSIC Playback screen will hide according to your settings.

MY VIDEO

- **General**

Press the **ENTER** key to select the “My Video” function.

Press the **ENTER** key to select a “My Video” menu option.

Available “My Video” menu options:

- Dir List - Arranges the video files based on their folder structure

- My Video Tag List - A list of video Tags assigned by the user

- **Play back Mode**

Use the **PREVIOUS** key to select previous video.

Use the **NEXT** key to select next video.

Press the **ENTER** key to pause and then press the **ENTER** key again to resume.

- **Exit play back mode**

Press the **BACK** key once to exit the video playback mode.

Hold the **BACK** key for 1 sec to go back to the main menu.

- **Video Settings**

Hold down the **ENTER** key while a video is playing to bring up the different video settings

Video Settings:

- Remove - This settings option will delete files from the player

- Loop Mode - Sequence / Repeat One / Repeat All / Random Play / Intro

- Add Tag - Tags are a way for the user to mark and save any moment in a video file

- Information - (Only available in play back mode) Displays video file information

- DRM – Digital Rights Management information

- Volume - Allows the user to adjust the volume of the audio file being played

Basic Operation

- **Converting Video Files**

The player supports video format of WMV, ASF, MPEG-4, and AVI. You must use the included AVI converter 2.0 to conveniently transform other video formats (MPG, MPEG, RM, RMVB, DAT) to AVI. The AVI converter 2.0 can also be used to make sure the existing AVI files are the appropriate pixel ratio for this player (320x240).

-
1. Insert the installation CD into your PC, or go to the TOOLS folder on the player and move the files to your computer.
 2. Install the Video Converter.
 3. After installation is complete, open the program to begin.
 4. Click the “Add File” button next to the “Input File” dialog box.
 5. Select a file that you wish to convert.
 6. Click the “Video Path” button next to the “Output File” dialog box.
 7. Select a location for the final conversion.
 8. Click the “Settings” button located in the “Output Info” region.
 9. Specify your desired settings - including screen width and height.
 10. Click the “Begin” button to begin converting.

Videos that are formatted .MOV need to be converted first, before they can be used by this player. <http://www.media-convert.com> is an example of a site that can be used to convert numerous different types of files. Make sure that the pixel ratio is still 320 Pixels x 240Pixels.

For additional conversion support – go to: www.bandexclusive.com/support

MY PICTURE

• General

Press the **ENTER** key to select the “My Picture” function.

Press the **ENTER** key to select a “My Picture” menu option.

Available “My Picture” menu options:

Picture List - Arranges the picture files based on their folder structure

Play Mode - Choose between Manual Play and Slide Play

Slide Gap - Choose from 1-10 Seconds

NOTE* Hold down the **NEXT** key or the **PREVIOUS** key to scroll through the “Slide Gap” sub menu options. Release the key just before you get to your desired sub menu option.

• My Picture Settings

Hold down the **ENTER** key to bring up the different “My Picture” settings

“My Picture” Settings:

Remove - This settings option will delete files from the player

Rotate - Rotate 90° / Rotate 180° / Rotate 270°

Zoom - Zoom In / Zoom Out

(NOTE* Press the ENTER Key, The picture will back to normal size)

Information - Displays photo file information

Volume - Allows the user to adjust the volume of the audio file being played

NOTE* All other settings except Volume are not available under slide play mode.

FM

• General

Please make sure the **headset is connected** to the player when you are in FM mode.

The headset serves as the antenna.

Press the **ENTER** key to select the “FM” function.

Press the **ENTER** key to select an “FM” menu option.

Available “FM” menu options:

Listen In - Choose this option to enter the general FM play back mode

Station List - A list of radio assigned by the user

FM Band - USA Band / Japan Band

Stop Playing - Stops the radio function from playing

.Press the **ENTER** key to pause and then press the **ENTER** key again to resume

• FM Settings

Hold down the **ENTER** key to bring up the different FM settings

FM Settings:

Auto Search - Scan all frequencies to find clear channels ,

Save/Remove Channel – Save/Remove a channel into the user’s Station List

Record Quality - (Refers to the FM record menu option) High / Medium / Low

FM Record - Record music straight from the radio

• Searching/Save Channels —Manual search

Use **NEXT** or **PREVIOUS** key to search for channels.

Hold down the **ENTER** key to bring up the different FM settings

Select “Save Channel” to save the channel that is playing.

Searching/Save Channels —Auto search

Hold down the **ENTER** key to bring up the different FM settings and select “Auto-Search”

Press the **BACK** key to stop the searching.

All the found channels will be saved in “Station List “ automatically.

• FM Record

Press the **ENTER** key to select the FM Record option in the FM Settings menu

Press the **ENTER** key to pause and then press the **ENTER** key again to resume

Press the **BACK** key to stop and save the recording in progress
NOTE* The name of the recording is displayed at the top of the screen while the recording is in progress. All recordings are saved into the RECORD folder on the player's internal memory and can be found in "Record list" under "My music" menu.

The **play mode** for recordings is same to music.

Basic Operation

MY EBOOK

• General

Press the **ENTER** key to select the "My Ebook" function.

Press the **ENTER** key to select a "My Ebook" menu option.

Available "My Ebook" menu options:

Reading - Takes the user back to the last text file that was opened

Dir List - Arranges the text files based on their folder structure

Tag List - A list of video Tags assigned by the user

Auto Play Gap - Choose from 5-30 Seconds

Hold down the **NEXT** key or the **PREVIOUS** key to scroll through the sub menu options. Release the key just before you get to your desired sub menu option.

• My Ebook Settings

Hold down the **ENTER** key to bring up the different "My Ebook" settings

"My Ebook" Settings:

Add Tag - Tags are a way for the user to bookmark any part of a text file

The added tag will show in the Tag List under "My Ebook" menu

Remove - This settings option will delete files from the player

Skip To - Choose from 0%-100%

Hold down the **NEXT** key or the **PREVIOUS** key to scroll through the sub menu options. Release the key just before you get to your desired sub menu option.

Volume - Allows the user to adjust the volume of the audio file being played

Use the **PREVIOUS** and **NEXT** keys to scroll through the text files

RECORDER

• General

Press the **ENTER** key to select the “Recorder” function.
Press the **ENTER** key to select a “Recorder” menu option.
Available “Recorder” menu options:

Now Recording - Takes the user right into the main recording interface
Rec Type - WAV Rec / MP3 Rec

- **Record Mode**

Press the **ENTER** key to pause and then press the **ENTER** key again to resume
Press the **BACK** key to stop and save the recording

Basic Operation

Press the **ENTER** key on the Now Recording menu option to begin another recording

NOTE* The name of the recording is displayed at the top of the screen while the recording is in progress. All recordings are saved into the RECORD folder on the player’s flash drive and can be found in “Record list” under “My music” menu. The play mode for recordings is same to music.

SETTINGS

NOTE* From the Main Menu, hold down the **BACK** key to shut down the player and save all changes. See **Shutting Down The Player** on page 3.

- **General**

Press the **ENTER** key to select the “Setting” function.
Press the **ENTER** key to select a “Setting” menu option.
Available “Setting” menu options:

Information - Displays the player information
Choose Back Picture - Choose from 6 different background image options
Display - Change the backlight time. Choose from 0-60 Seconds
Rename Playlist - Rename the 5 different **My Music** playlists
Date and Time - Adjust the date and time (press the **ENTER** key to set)
Player Configure - Displays different customization options for the player
Language Select - Choose from 14 different languages
Encrypted Disk Setting – Enables a partition in the internal memory allow certain files to be protected from viewing or being off loaded from the player.
NOTE* Write down the password as you will not be able to recover this drive if you lose the password.
Reset - Choose to reset the default player settings

- **Chose Back Picture**

Press the **ENTER** key to select the “Choose Back Picture” menu option.
Use the **PREVIOUS** and **NEXT** keys to select the back picture and press the **ENTER** key to save the change

- **Backlight**

Hold down the **NEXT** key or the **PREVIOUS** key to scroll through the sub menu options. Release the key just before you get to your desired sub menu option.

- **Rename Playlist**

Press the **ENTER** key to select the “Rename Playlist” menu option.
Use **PREVIOUS** and **NEXT** key to highlight any playlist and press enter key.
Use the **PREVIOUS** and **NEXT** keys to move horizontally through the key pad
Use the **VOLUME** key to move vertically through the key pad
Press the **ENTER** key to select a letter
Select the “→Del” key to delete the letter
Once the input is finished, select the “←Enter” key to save the new owner name.
NOTE* To exit the user must **ENTER** the new owner name

- **Date and Time**

Press the **ENTER** key to select the “Adjust Date and Time” menu option
Highlight any menu option and hold down the **NEXT** key or the **PREVIOUS** key to scroll through the sub menu options. Release the key just before you get to your desired sub menu option.
NOTE* Press the **ENTER** key to save changes and exit

- **Player Configure**

- Owner**

- Press the **ENTER** key to select the “owner” menu option
Use the **PREVIOUS** and **NEXT** keys to move horizontally through the key pad
Use the **VOLUME** key to move vertically through the key pad
Press the **ENTER** key to select a letter
Select the “→Del” key to delete the letter
Once the input is finished, select the “←Enter” key to save the new owner name.
NOTE* To exit the user must **ENTER** the new owner name

- Off Time and Sleep Time**

- Hold down the **NEXT** key or the **PREVIOUS** key to scroll through the sub menu

options. Release the key just before you get to your desired sub menu option.

Format Card - Format the memory of the inserted TF Card (files will be erased)

Format Memory - Format the internal memory on the player (files will be erased)

- **Language Select**

Press the **ENTER** key to select the “Language Select” menu option.


Use the **PREVIOUS** and **NEXT** keys to select the language and press the

ENTER key to save the change.

Additional Information

TF card (mini SD)

Put the TF card into the TF card jack.

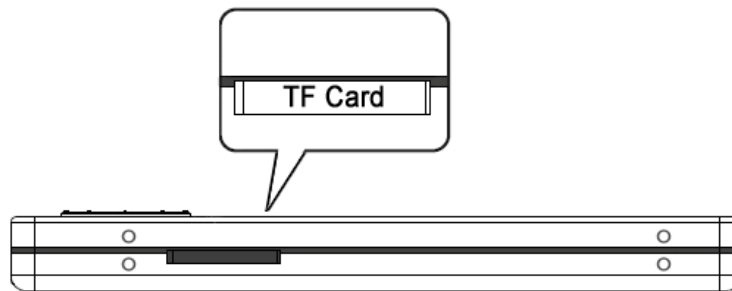

NOTE* Files in the internal flash memory of the player cannot be read at the same time as files on separate SD cards. Taking out the SD card during data transfer may cause data loss and/or memory card damage.

Trouble Shooting

1. There is no sound

Check whether Volume is set to “0”.

Check whether the earphones are connected to the player firmly.

Check your files to see if they are corrupted.

2. Failed download of files form PC.

Check the connection between your computer and the player.

Check if the player’s Memory is full.

4. The player does not power on

Make sure there is enough battery power.

Check whether the power key is switched to the on position.

5. Failed to play music or video files.

Check the format of the files.